
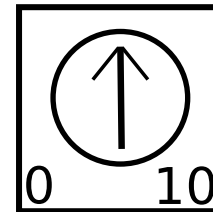


Description

- A** - Radio cable connector
- B** - Ptt (Push to talk) switch
- C** - Volume Potentiometer
- D** - Auxiliar audio input line
- E** - Speakers Output
- F** - Microphone input




Trimmer

Settings

ComCore – 2M				
Radio	Potentiometer	J1	J2	J3
Kenwood	0	C	O	X
Icom	0	O	O	X
Midland	9	O	C	X
Yaesu	2	O	C	X
Motorola	9	O	C	X



J3 must be closed when no volume button is used and open when using volume button

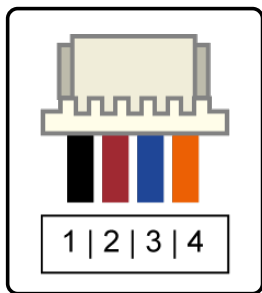

Connections are not color code oriented. Your kit may have different cable colors

Pinout

- (A)**
- 1 - Mic+
 - 2 - Mic- / Ptt
 - 3 - Spk+
 - 4 - Spk- / Gnd

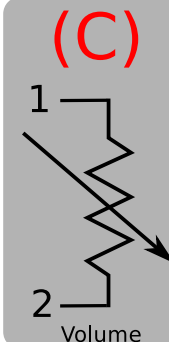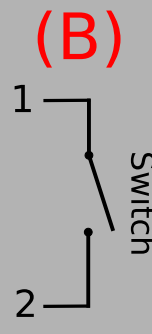

- (D)**
- 1 - In +
 - 2 - In - / Gnd

